



Einwahl via Gateway

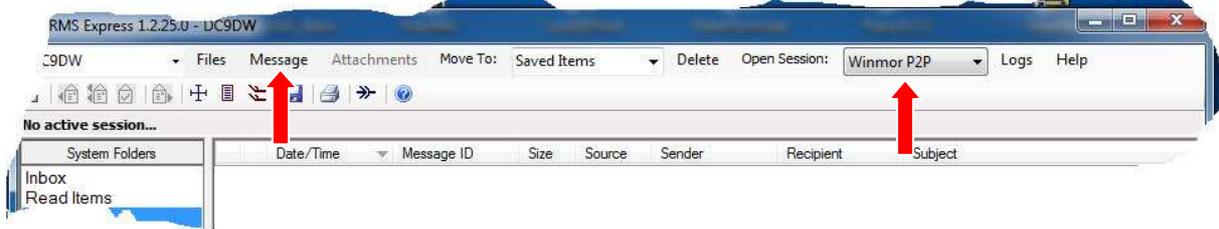

2. Neue Mail

1. Umschalten

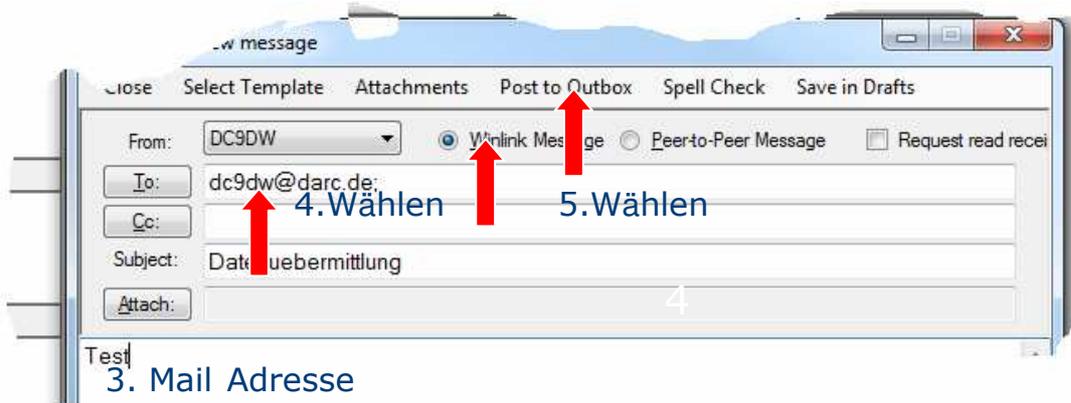


3. Mail Adresse



7. Wählen

8. Wählen

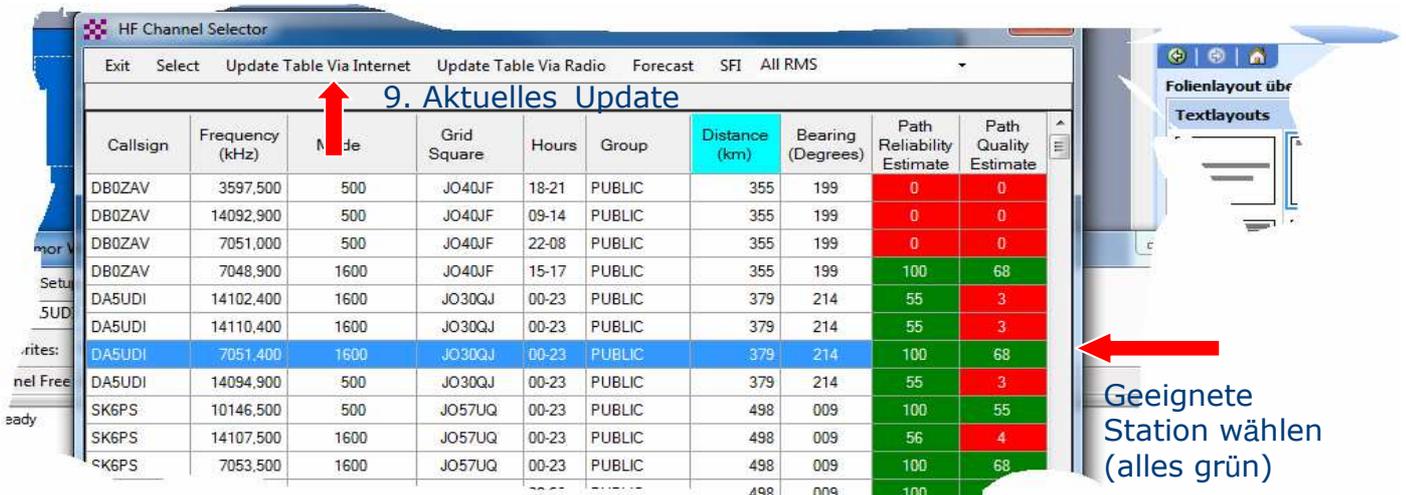

9. Aktuelles Update

Geeignete Station wählen (alles grün)

Winmor Winlink Session - DC9DW

Exit Setup Switch to Peer-to-Peer Channel Selection Forecast Best chan. Next chan. Hide TNC **Start** Stop Abort

Center Freq. (kHz): 7051,400 Dial Freq. (kHz): 7049,900 Bearing: 214 Quality: 68

Channel Busy In: 0/0 Out: 0/0 BPM: 0/0 Disconnected

WINMOR Sound Card TNC Ver:1.5.8.0 Port:8500

Help Hide Send ID

Connection State
DISCONNECTED
TCP Capture OK

Transmit
Avg ACK Percentage: 0 to 100
Xmt Frame:

Receive
Rcv Level: [Progress Bar]
Remote Station Offset: 90,3 Hz
Rcv Frame:

Waterfall 2KHz
Spectrum
Disable

Busy Detector
Busy (N)
Squelch: 5

500 2500 4FSK / 23

10. Wählen
Ablauf ist dann
automatisch